

# Burco 20 ltr Gas Water Boiler

## User instructions

**Please read all instructions carefully before using this appliance**

### Lighting the boiler

- Turn the gas supply on at the bottle.
- Depress the control knob and turn slowly to the ignition position. A click will be heard and the burner will light. Several attempts may be necessary after initial connection.
- Continue to press the control knob for 20 seconds after the burner has been lit.
- Release the control knob. The required setting can now be selected between the high and low settings.
- A full 20 ltr boiler filled to capacity will take approximately 45-50 minutes to boil from cold.
- Do not fill above the 'MAX' capacity mark. If the boiler is overfilled there is a risk that boiling water may be ejected.

### **WARNING**

- The boiler should not be carried whilst it contains water, particularly hot or boiling water.
- Please ensure the appliance is used in a well ventilated room.
- In the event of a gas leak immediately turn off the gas supply at the bottle.