

Conveyor Toaster

User Instructions

Please read all the information below before using this appliance

Preparation

1. Connect the unit to the electricity supply.
2. Turn the switch (4) on: the switch illuminates.
3. Turn the element control knobs (1 and 2) to the required temperature.
4. Turn the conveyor control knob (3) to the required speed.
5. Wait 10-15 minutes for the toaster to heat up.

Toasting Tips

☞☞ You will need to adjust the temperature and conveyor speed to achieve the best results for each type of bread you use.

☞☞ Single slices will require a different setting from two slices side by side..

☞☞ Best results are obtained by using bread which is at least one day old.

☞☞ The elements may be turned to a lower

temperature to save energy during quieter periods.

☒☒ To toast single sided bread products (buns etc), set the bottom element at a higher temperature than the top element. For stability, the flat (cut) side of the product should face downwards. This will then warm but not toast the uncut side of the bread.

☒☒ It is important to note that any item placed on the belt will return upside down into the toast tray.

CLEANING

- Clean the unit regularly to maintain performance and hygiene.
- Disconnect the unit from the electricity supply and allow to cool before starting to clean
- To cool the unit quickly, switch off both elements and turn conveyor to low, leave fan running until unit has cooled.
- Wipe the unit down with a damp soft cloth.
- Do not allow excess water to run into the unit.
- Do not use abrasive creams or scourers.
- Switch off unit and allow cool.

Warning – Do not attempt to remove crumb tray when unit is operating as it will be hot.