

TEFCOLD FRIDGE AND FREEZER

USER INSTRUCTIONS

Please read all information carefully before using this appliance

Instructions

- The thermostat is placed in the control panel at the top of the cabinet. The thermostat has been pre-set and in most cases it is not necessary to adjust the settings.
- When turning on the cabinet the display will show the current temperature in the cabinet.
- Press the SET key to display the set temperature. Press again to return to normal reading.
- To set a new temperature press the SET key continuously for more than 3 seconds and the display shows the set temperature. Press the 'arrow down' key to lower the set temperature. Press the 'arrow up' key to increase the set temperature. Press the SET key to save the new settings. The display will flash with the new value and will return to normal reading.

Alarm codes

- 'P1' Flashing in the display: indicates that the cabinet sensor is defective. The cabinet will strive to keep the set temperature until it has been repaired.
- 'P2' Flashing in the display: indicates the evaporator is defective. This does not influence the operation of the cabinet, but should be repaired as soon as possible.