Hot Cupboard Hot Cupboard/Bain Marie

User instructions

Please read the following carefully before using this appliance

WARNING

 Parts of this unit will become hot in normal use therefore suitable precaution must be taken to avoid accidental burns.

General operation

- With the door closed, switch on the mains power supply. The green light will indicate that there is power to the unit.
- Pre-heat the hot cupboard empty with the control knob set to maximum for at least 25 minutes. The amber light, when illuminated, indicates power to the element and will go out when the temperature is reached.. The light switches on and off as the thermostat stabilizes the temperature.
- Load the hot cupboard as required. The desired heat setting will be found with practice and will depend on the amount and temperature of the food in the unit and the frequency of the opening and shutting of doors.
- Once loaded, do not disconnect from the mains supply until it is ready to be moved to the distribution point. Once the distribution point is reached, re-connect to the mains supply to ensure correct holding temperature is maintained.
- To turn off unit-switch mains off at the socket and the green light will go out.

Other information

• Please allow 1-2 hours to warm a full load of plates

 A small bowl of water placed on the bottom shelf of the hot cupboard may help prevent food drying out if keeping for an extended period.

Additional information for hot cupboards with bain marie tops

If the Bain Marie is to be used dry, allow it to heat up for about 25 minutes with the gastronorm dishes in situ, before filling with food. Any spare containers should be half filled with hot water and kept in position to prevent any unnecessary heat loss.

If the Bain Marie is to be used wet, fill the tank up to the high level mark with hand hot water. A minimum depth of water must always be maintained indicated by the low level mark and should not be allowed to boil dry. Pre-heat the water for about 30 minutes with gastronorm dishes in situ before filling with food. Turn unit off before draining using the tap at the side of the unit.